

# ILA002300A 20 - 3000 MHz LOW NOISE AMPLIFIER

## **Key Features**



- 20 ~ 3000 MHz, 50 Ohm Impedance
- 1.3 dB Noise Figure
- 15 dB Gain
- 1.35:1 VSWR
- 12 dBm P<sub>1dB</sub>
- Precision Machined Housing
- Single DC Power Supply
- Meet MIL-STD-202g

### **Applications**

- LTE
  - Receiver Amplifiers
  - RF Bench Tests
  - Mobile Base Station Applications



### **Absolute Maximum Ratings**

Parameters	Units	Ratings
DC Power Supply Voltage	V	-0.5,32
RF Input CW Power	dBm	10
Storage Temperature	°C	-40 ~ +85
Operating Temperature	°C	-40 ~ +85

Operation of this device beyond any one of these parameters may cause permanent damage.

## **Specifications**


Summary of the key electrical specifications at 25°C

Index	Testing Item	Symbol	Test Constraints	Min	Nom	Max	Unit
1	Frequency Range	BW	50 Ohm Impedance	20		3000	MHz
2	Gain	S <sub>21</sub>	20 – 3000 MHz	13	15	17	dB
3	Gain Variation	ΔG	20 – 3000 MHz		+/- 0.5		dB
4	VSWR	SWRi	20 – 3000 MHz all RF ports		1.35:1	1.8:1	Ratio
5	Reverse Isolation	S <sub>12</sub>	20 – 3000 MHz	15	20		dB
6	Noise Figure	NF	20 – 3000 MHz		1.3	1.6	dB
7	Output Power 1dB Compression Point	P <sub>1dB</sub>	20 – 3000 MHz	8	12		dBm
8	Output-Third-Order Interception Point	IP <sub>3</sub>	Two-Tone, P <sub>out</sub> = 0 dBm each, 1 MHz Separation	20	25		dBm
9	Current Consumption	l <sub>dd</sub>	$V_{dd} = +12.0 V$		25		mA
10	Power Supply Operating Voltage	$V_{dd}$		+8	+12	+16	V
11	Operating Temperature	T。		-40		+85	°C
12	Thermal Resistance	R <sub>th.c</sub>	Junction to case			215	°C/W

## **Functional Block Diagram**

## **Outline, IP-3 Housing**

1.000 [25.4]

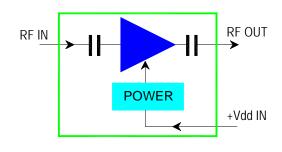

# **Ordering Information**

Model	Connectors		
Number	IN	OUT	
ILA002300A	SMA Female	SMA Female	

0.415 0.415 [10.5] [11.4] [10.5] 0.400 Dυ ĪΝ IMW P/N: XXXXXXX F=XXXX-XXXX MHz 33.0] 129 0.195 [4.9 GND Vdd (+ Ø0.120 [Ø3.0] 0.085 Щ 0.085 [5:5] INCH [mm] UNITS: 0.500 BODY: Aluminum Alloy [12.7] Finish: RoHS Plating RF Connector: SMA F Gold 0.735 [18.7]


Specifications and information are subject to change without notice.

Fax: +86 591 87303613 E-mail: sales@infinitimw.com

0.450



# **Typical Data**

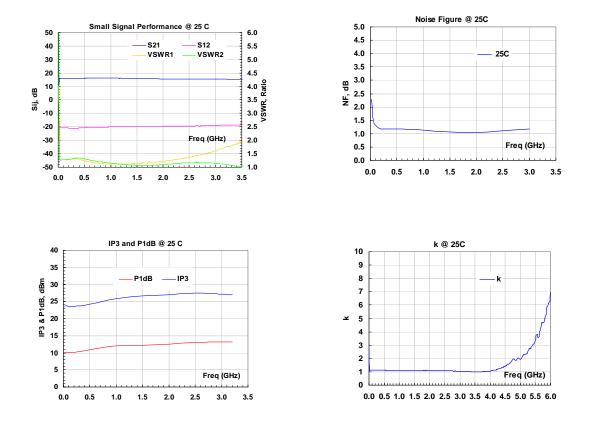

#### **Application Notes:**

#### A. SMA Torque Wrench Selection

Always use a torque wrench with  $5 \sim 6$  inch-lb coupling torque setting for mating the SMA cables to the amplifier. Never use torque more than 8 inch-lb wrench for tightening the mating cable to the connector. Otherwise, the permanent damage will occur to the SMA connectors of the amplifier. 8710-1582 (5 inch-lb) is one of the ideal torque wrench choice from Agilent Technology.

#### B. Mounting the Amplifier

Use three pieces of #2-56 with longer than 9/16" screws for mounting the amplifier on a metal-based chase. Flat and spring washers are needed to prevent the screw loosening during the shock and vibration. Always use the appropriate torque setting of the power screwdriver to mount them.

\*\*\*\*\*

Specifications and information are subject to change without notice.